Features

- Minimal heat generating, high torque motor (control voltage 55V)
- Higher cost-efficiency compared to conventional servo motors

Please read "Safety Considerations" in operation manual before using.

• Available in motor frame size 42mm, 56mm, 60mm




[Frame size 42mm]

[Frame size 60mm]

NEW

Ordering Information

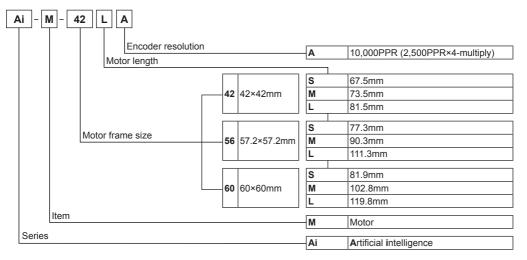

CE

O AiS Series

Set	Driver	Motor
AiS-42SA	AiS-D-42SA	Ai-M-42SA
AiS-42MA	AiS-D-42MA	Ai-M-42MA
AiS-42LA	AiS-D-42LA	Ai-M-42LA
AiS-56SA	AiS-D-56SA	Ai-M-56SA
AiS-56MA	AiS-D-56MA	Ai-M-56MA
AiS-56LA	AiS-D-56LA	Ai-M-56LA
AiS-60SA	AiS-D-60SA	Ai-M-60SA
AiS-60MA	AiS-D-60MA	Ai-M-60MA
AiS-60LA	AiS-D-60LA	Ai-M-60LA

O AiC Series

Set	Driver	Motor
AiC-42SA	AiC-D-42SA	Ai-M-42SA
AiC-42MA	AiC-D-42MA	Ai-M-42MA
AiC-42LA	AiC-D-42LA	Ai-M-42LA
AiC-56SA	AiC-D-56SA	Ai-M-56SA
AiC-56MA	AiC-D-56MA	Ai-M-56MA
AiC-56LA	AiC-D-56LA	Ai-M-56LA
AiC-60SA	AiC-D-60SA	Ai-M-60SA
AiC-60MA	AiC-D-60MA	Ai-M-60MA
AiC-60LA	AiC-D-60LA	Ai-M-60LA

Specifications

O Motor

• Frame size 42mm

				- Fiber
Model	Ai-M-42SA	Ai-M-42MA	Ai-M-42LA	Optic Sensors
Max. holding torque ^{**1}	2.55kgf·cm (0.25N·m)	4.08kgf·cm (0.4N·m)	4.89kgf·cm (0.48N·m)	- 36115015
Rotor moment of inertia	35g·cm ² (35×10 ⁻⁷ kg·m ²)	54g·cm ² (54×10 ⁻⁷ kg·m ²)	77g·cm ² (77×10 ⁻⁷ kg·m ²)	(C) Door/Area
Rated current	1.7A/Phase			Sensors
Resistance	1.7Ω/Phase ±10%	1.85Ω/Phase ±10%	2.1Ω/Phase ±10%	(D)
Inductance	1.9mH/Phase ±20%	3.5mH/Phase ±20%	4.4mH/Phase ±20%	(D) Proximity Sensors
Weight ^{**2}	Approx. 0.45kg (approx. 0.34kg)	Approx. 0.52kg (approx. 0.41kg)	Approx. 0.59kg (approx. 0.48kg)	
• Frame size 56mm				(E) Pressure

e Framo sizo 56mm

• I fullie 3ize 50mm				Sensors	
Model	Ai-M-56SA	Ai-M-56MA	Ai-M-56LA		
Max. holding torque ^{**1}	6.12kgf·cm (0.6N·m)	12.24kgf·cm (1.2N·m)	20.39kgf·cm (2.0N·m)	(F)	
Rotor moment of inertia	140g·cm ² (140×10 ⁻⁷ kg·m ²)	280g·cm ² (280×10 ⁻⁷ kg·m ²)	480g·cm ² (480×10 ⁻⁷ kg·m ²)	Rotary Encoders	
Rated current	3.5A/Phase			(G)	
Resistance	0.55Ω/Phase ±10%	0.57Ω/Phase ±10%	0.93Ω/Phase ±10%	Connectors/ Connector Cables/	
Inductance	1.05mH/Phase ±20%	1.8mH/Phase ±20%	3.7mH/Phase ±20%	Sensor Distribution Boxes/Sockets	
Weight ^{**2}	Approx. 0.76kg (approx. 0.62kg)	Approx. 0.99kg (approx. 0.85kg)	Approx. 1.36kg (approx. 1.22kg)	(H)	
• Frame size 60mm				Temperature Controllers	

• Frame size 60mm

Model	Ai-M-60SA	Ai-M-60MA	Ai-M-60LA	(1)
Max. holding torque ^{*1}	11.22kgf·cm (1.1N·m)	22.43kgf·cm (2.2N·m)	29.57kgf·cm (2.9N·m)	SSRs / Po Controller
Rotor moment of inertia	240g·cm ² (240×10 ⁻⁷ kg·m ²)	490g·cm ² (490×10 ⁻⁷ kg·m ²)	690g·cm ² (690×10 ⁻⁷ kg·m ²)	
Rated current	3.5A/Phase			(J)
Resistance	1.0Ω/Phase ±10%	1.23Ω/Phase ±10%	1.3Ω/Phase ±10%	Counters
Inductance	1.5mH/Phase ±20%	2.6mH/Phase ±20%	3.8mH/Phase ±20%	
Weight ^{**2}	Approx. 0.89kg (approx. 0.75kg)	Approx. 1.27kg (approx. 1.13kg)	Approx. 1.58kg (approx. 1.44kg)	(K) Timers

%1: Max. holding torque is maintenance torque of stopping the motor when supplying the rated current (2-phase excitation) and is the standard for comparing the performance of motors.

%2: The weight includes packaging. The weight in parenthesis is for unit only.

• Common specifications

			(M)
Standard step angle		1.8°/0.9° (Full/Half step)	
Motor phase		2-phase	
Run method		Bipolar	
Insulation cla	SS	B type (130°C)	Display Units
Insulation res	istance	Over 100MΩ (at 500VDC megger), between motor coil-case	
Dielectric stre	ength	500VAC 50/60Hz for 1 min between motor coil-case	(O) Sensor
Vibration		1.5mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours	Controllers
Shock		Approx. max. 50G	(P) Switching
Environment	Ambient temperature	0 to 50°C, storage: -20 to 70°C	
Environment Ambient humidity		20 to 85%RH, storage: 15 to 90%RH	
Approval		CE	(Q) Stepper Motors
Protection structure		IP30 (IEC34-5 standard)	& Drivers & Controllers
Stop angle er	ror ^{%1}	±0.09°	(R)
Shaft vibratio	n ^{**2}	0.03mm T.I.R.	Graphic/ Logic
Radial Movement ^{**3}		Max. 0.025mm (load 25N)	
Axial Movement ^{#4}		Max. 0.01mm (load 50N)	
Concentricity for shaft of setup in-low		0.05mm T.I.R.	
Perpendicularity of set-up plate shaft		0.075mm T.I.R.	Devices
	X1: Specifications are for full-step angle, without load. (values may vary by load size) 0 0.05 A		(T) Software

※2: T.I.R. (Total Indicator Reading)

- Indicates total quantity of dial gauge in case of 1 rotation of measuring part around the reference point.

X3: Amount of radial shaft displacement when adding a radial load (25N) to the tip of the motor shaft.

%4: Amount of axial shaft displacement when adding a axial load (50N) to the shaft.

*Environment resistance is rated at no freezing or condensation.



А

Л 0.03

Т 0.075 А À (A) Photoelectric Sensors

Powe llers

(L) Panel Meters


(B)

Specifications

© Encoder


Item			Incremental rotary encoder	
Resolution			10,000PPR (2,500PPR×4-multiply)	
	Output phase	9	A, \overline{A} , B, \overline{B} , Z, \overline{Z} phase	
	Output duty rate		$\frac{T}{2} \pm \frac{T}{4}$ (T=1 cycle of A phase)	
	Control Line driver		Output between A and B phase: $\frac{T}{4} \pm \frac{T}{8}$ (T=1 cycle of A phase)	
Electrical specification			 [Low] - Load current: max. 20mA, residual voltage: max. 0.5VDC [High] - Load current: max20mA, output voltage: min. 2.5VDC 	
	Response tin	ne (rise, fall)	Max. 0.5µs (cable length: 2m, I sink = 20mA)	
	Max. response frequency		300kHz	
	Power supply		5VDC== ±5% (ripple P-P: max. 5%)	
	Current consumption		Max. 50mA (disconnection of the load)	

Encoder Control Output Diagram

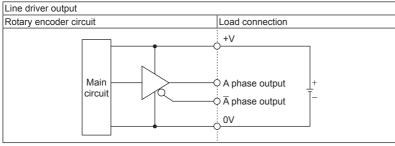

 \otimes All output circuits of A, \overline{A} , B, \overline{B} , Z, \overline{Z} phase are the same.


Encoder Output Waveforms

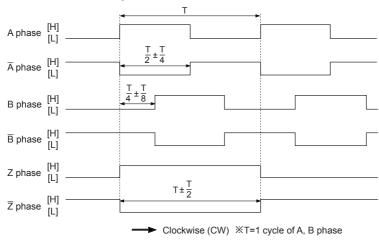




Connection Diagram

Autonics 2 phase closed-loop stepper motors take bipolar wiring methods. The wiring colors for each phase and lead-wire are as the followings:

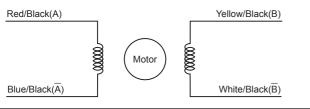


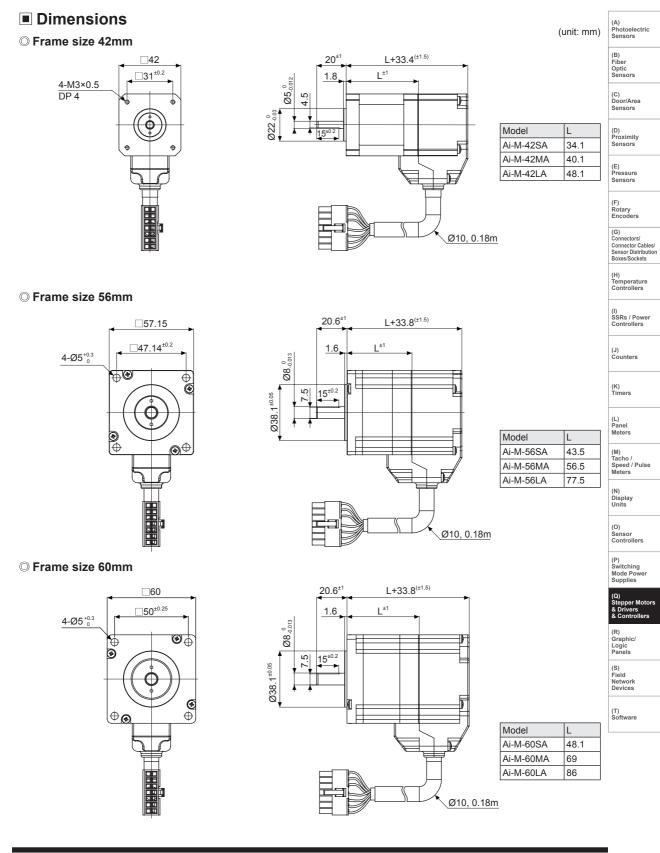


Autonics

Motor Characteristics

◎ Frame size 42mm

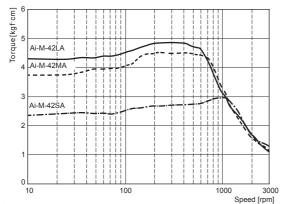

◎ Frame size 60mm

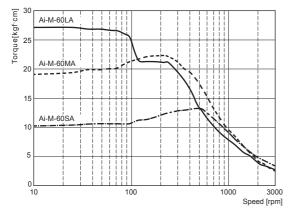

Connection Connectors of Motor

○ CN2: Motor+Encoder Connector

Pin arrangement	Pin no.	Function	Pin no.	Function
	1	GND	8	+5VDC
	2	ENCODER A	9	ENCODER A
	3	ENCODER B	10	ENCODER B
891011121314	4	ENCODER Z	11	ENCODER Z
1234567	5	GND EARTH	12	N·C
	6	MOTOR A	13	MOTOR B
	7	MOTOR A	14	MOTOR B
Turne	Specifications			Manufacture
Туре	Connector	Connector terminal	Housing	Manufacture
CN2 Motor+Encoder	5557-14R	5556T	<u> </u>	Molex

XAbove connectors are suitable for Ai-M Series. You can use equivalent or substitute connectors.

○ Cable (sold separately)

Туре	Model		
Motor+Encoder cable	Normal Moving		
	C1D14M-□ ^{×1}	C1DF14M-□ ^{≋1}	

※1: □ indicates cable length (1, 2, 3, 5, 7, 10).

E.g.) C1DF14M-10: 10m moving type motor+encoder cable.

25 20 4i-M-56LA 10 4i-M-56SA 5

100


1000

3000

Speed [rpm]

O Frame size 56mm

0∟ 10

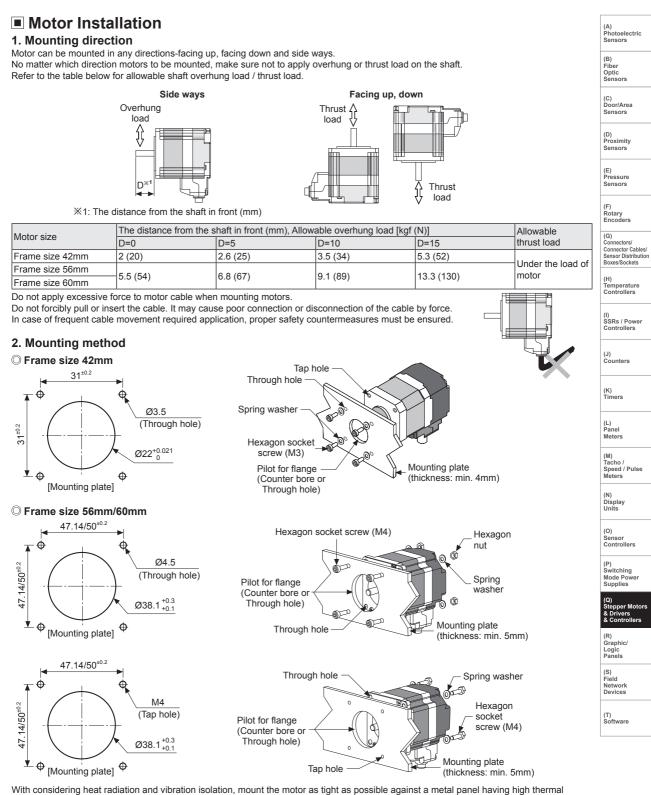

With considering heat radiation and vibration isolation, mount the motor as tight as possible against a metal panel having high thermal conductivity such as iron or aluminum.

When mounting motors, use hexagon socket screws, hexagon nuts, spring washers and flat washers. Refer to the table below for allowable thickness of mounting plate and using bolt. Do not draw the wire with over strength 30N after wiring the encoder.

3. Connection with load

When connecting the load, be sure of the center, tension of the belt, and parallel of the pulley.

When connecting the load such as a pulley, a belt, be sure of the allowable thrust load, radial load, and shock.

Tighten the screw for a coupling or a pulley not to be unscrewed.

When connecting a coupling or a pulley on the motor shaft, be sure of damage of the motor shaft and the motor shaft bearing. Do not disassemble or modify the motor shaft to connect with the load.

Direct load connection with coupling	Load connection with pulley, belt, and wire	Load connection with gear
Flexible coupling With the series ser		
When connecting the load directly (ball screw, TM screw, etc) to the motor shaft, use a flexible coupling as shown in the above figure. If the center of the load is not aligned with that of shaft, it may cause severe vibration, shaft damage or shorten life cycle of the shaft bearing.	The motor shaft and the load shaft should be parallel. Connect the motor shaft and the line which connects the center of two pulleys to a right	The motor shaft and the load shaft should be parallel. Connect the motor shaft to the center of gear teeth side to be interlocked.

4. Installation condition

Install the motor in a place that meets certain conditions specified below.

It may cause product damage if it is used out of following conditions.

①Inside of the housing which is installed indoors

(This unit is manufactured for the purpose of attaching to equipment. Install a ventilation device.)

- ②Within 0 to 50°C (at non-freezing status) of ambient temperature
- ③Within 20 to 85%RH (at non-dew status) of ambient humidity
- (4) The place without explosive, flammable and corrosive gas ⑤The place without direct ray of light

©The place where dust or metal scrap does not enter into the unit (7) The place without contact with water, oil, or other liquid

The place without contact with strong alkali or acidity

(1) The place where easy heat dissipation could be made

@The place without continuous vibration or severe shock

11 The place with less salt content

@The place with less electronic noise occurs by welding machine, motor, etc.

[®]The place where no radioactive substances and magnetic fields exist. It shall be no vacuum status as well.

Troubleshooting

1. When motor does not rotate

①Check the connection status between controller and driver, and pulse input specifications (voltage, width). ②Check the pulse and direction signal are connected correctly.

2. When motor rotates to the opposite direction of the designated direction ①When RUN mode is 1-pulse input method, CCW input [H] is for forward, [L] is for backward. @When RUN mode is 2-pulse input method, check CW and CCW pulse input are changed or not.

3. When motor drive is unstable

Check that driver and motor are connected correctly. @Check the driver pulse input specifications (voltage, width).

Proper Usage

- 1. Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents. 2. Using motors at low temperature may cause reducing ball bearing's grease consistency and friction torque is increased. Start the motor in a steady manner since motor's torque is not to be influenced. 3. If wiring encoder cable, separate it from high voltage line or power cable for preventing surge and inductive noise. The cable length should be as short as possible. Failure to follow this instruction may result in raised cable resistance, residual voltage, and output waveform noise 4. Must connect the encoder shield cable to the F.G. terminal.
- 5. For using motor, it is recommended to maintenance and inspection regularly. ①Unwinding bolts and connection parts for the unit installation and load connection ②Strange sound from ball bearing of the unit ③Damage and stress of lead cable of the unit (Connection error with driver (s) Inconsistency between the axis of motor output and the center, concentric (eccentric, declination) of the load, etc.

6. This unit may be used in the following environments. (Indoors (in the environment condition rated in 'Specifications') ②Altitude max. 2,000m ③Pollution degree 2 ④Installation category II

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoder

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stei (Q) Stepper Motor & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software