Autonics

• Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.

- A symbol indicates caution due to special circumstances in which hazards may occur.
- **Warning** Failure to follow instructions may result in serious injury or death.
- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) ailure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.
- Failure to follow this instruction may result in explosion or fire. 03. Do not disassemble or modify the unit.
- Failure to follow this instruction may result in fire.
- 04. Do not connect, repair, or inspect the unit while connected to a power source.
- Failure to follow this instruction may result in fire. 05. Check 'Connections' before wiring. Failure to follow this instruction may result in fire.

Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage 02. Use a dry cloth to clean the unit, and do not use water or organic solvent.
- Failure to follow this instruction may result in fire. 03. Do not supply power without load. Failure to follow this instruction may result in fire or product damage.

Cautions during Use

Safety Considerations

- · Follow instructions in 'Cautions during Use'.
- Otherwise, it may cause unexpected accidents. • 12-24 VDC -- power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Use the product, after 0.8 sec of supplying power.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent surge and inductive noise. Do not use near the equipment which generates strong magnetic force or high
- frequency noise (transceiver, etc.). In case installing the product near the equipment which generates strong surge (motor,

welding machine, etc.), use diode or varistor to remove surge. • If the surface of the product is rubbed with a hard object, PTFE coating can be worn

- out. This unit may be used in the following environments
- Indoors (UL Type 1 Enclosure) Altitude max. 2,000 m
- Pollution degree 3 - Installation category II

Cautions for Installation

- Install the unit correctly with the usage environment, location, and the designated specifications
- · Do NOT impacts with a hard object or excessive bending of the wire lead-out. It may cause damage the water resistance.
- Do NOT pull the Ø 3.5 mm cable with a tensile strength of 25 N, the Ø 4 mm cable with a tensile strength of 30 N or over and the Ø 5 mm cable with a tensile strength of 50 N or over. It may result in fire due to the broken wire
- When extending wire, use AWG 22 cable or over within 200 m.

Cylindrical Inductive Full-Metal Proximity Sensors



PRF Series (DC 2-wire) CATALOG

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

 
The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- · High resistance to impact and wear caused by contact with workpieces or wire brushes (sensor head / housing: stainless steel)
- · Reduced risk of malfunction caused by aluminum chips
- Spatter-resistant type
- : PTFE coating prevents malfunctions caused by welding spatter
- 360° ring type operation indicator (red LED) (except Ø 8 mm model)
- Oil resistant cable
- IP67 protection structure (IEC standards)

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.



G Cable

V: Oil resistant cable type

IV: Oil resistant cable type (IEC standards)

 
Oconnection No-mark: Cable type W: Cable connector type

OIA. of sensing side

Number: DIA. of sensing side (unit: mm)

Connections


- LOAD can be wired to any direction.
- Connect LOAD before suppling the power.
- Cable type




Cable connector type

 - · For LOAD connection, follow the cable type connection.
- Fasten the connector not to shown the thread. (0.39 to 0.49 N m)
- · Fasten the vibration part with PTFE tape.






Inner circuit

 

Operation Timing Chart

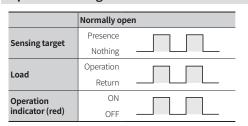

Sold Separately

- Connector cable, Connector connection cable
- Transmission coupler
- Spatter protection cover
- Fixing bracket

Specifications Installation Flush type PRF T08-PRF T30-PRF T12-PRF T18-General 1.5DO-2DO-5DO-10DO-PRFA T08-PRFA T12-PRFA T18-PRFA T30-Spatter-resistant 5DO-🗆 1.5DO-2DO-10DO-DIA. of sensing side Ø8mm Ø 12 mm Ø 18 mm Ø 30 mm Sensing distance ⁰¹⁾ 1.5 mm 2 mm 5 mm 10 mm

Setting distance	0 to 1.05 mm	0 to 1.4 mm	0 to 3.5 mm	0 to 7 mm	
Hysteresis	\leq 15 % of sensing distance				
Standard sensing target: iron	8 × 8 × 1 mm 12 × 12 × 1 mm 30 × 30 × 1 mm 54 × 54				
Response frequency ⁰²⁾	200 Hz	100 Hz	80 Hz	50 Hz	
Affection by temperature	$\leq \pm$ 20 % for sensing distance at ambient temperature 20 °C				
Indicator	Operating indicator (red)				
Approval	CE دارون الله: ۲۹۱ ال	CE () us uster []	CE @	CE @us usms [f][
Unit weight (package)	≈ 55 g (≈ 80 g)	≈ 83 g (≈ 110 g)	≈97g(≈132g)	≈ 170 g (≈ 225 g)	

01) Use accessories (nut, washer) made of SUS. Or, sensing distance cannot be guaranteed

02) The response frequency is the average value. The standard sensing target is used and the width is set as 2 times of the standard sensing target, 1/2 of the sensing distance for the distance.

Power supply	12 - 24 VDC== (ripple P-P: \leq 10 %), operating voltage: 10 - 30 VDC==			
Leakage current	\leq 0.8 mA			
Control output	3 to 100 mA			
Residual voltage	\leq 3.5 V			
Protection circuit	Surge protection circuit, output short over current protection circuit, reverse polarity protection			
Insulation resistance	\geq 50 M Ω (500 VDC== megger)			
Dielectric strength	1,000 VAC \sim 50/60Hz for 1 minute (between all terminals and case)			
Vibration	1.5 mm amplitude at frequency 10 to 55 Hz in each X, Y, Z direction for 2 hours			
Shock	1,000 m/s ² (≈ 100 G) in each X, Y, Z direction for 10 times (DIA. of sensing side Ø 8 mm : 500 m/s ² (≈ 50 G) in each X, Y, Z direction for 10 times)			
Ambient temp. ⁰¹⁾	-25 to 70 °C, storage: -25 to 70 °C (non-freezing or non-condensation)			
Ambient humi.	35 to 95 %RH, storage: 35 to 95 %RH (non-freezing or non- condensation)			
Protection	IP67 (IEC standards)			
Connection	Cable type / Cable connector type model			
Cable spec. ⁰²⁾	DIA. of sensing side Ø 8 mm: Ø 4 mm, 2-wire DIA. of sensing side Ø 12 mm, Ø 18 mm, Ø 30 mm: Ø 5 mm, 2-wire			
Wire spec.	AWG 22 (0.08 mm, 60-wire), insulator diameter: Ø 1.25 mm			
Connector	M12 connector			
Material	Oil resistant cable (dark gray): oil resistant polyvinyl chloride (PVC)			
General	Case/Nut: SUS303, washer: SUS304, sensing side ⁰³ : SUS303			
Spatter-resistant	Case/Nut: SUS303 (PTFE coated), washer: SUS304, sensing side ⁶³ : SUS303 (PTFE coated)			

01) UL approved surrounding air temperature 40 °C

(package)

 
02) Cable type: 2 m (option: 5 m), cable connector type: 300 mm 03) Thickness: 0.8 mm (DIA. of sensing side Ø 8 mm: 0.4 mm)

Effect of Aluminum Scraps

When aluminum scraps are attached or stacked at sensing side, the proximity sensor does not detect and sensing signal is OFF.

However, the below cases may occur to sensing signal. In this case, remove the scraps.

• When the size of aluminum scraps (d) is






· When aluminum scraps are attached on the

sensing side by external pressure

Cut-out Dimensions

• Unit: mm, For the detailed drawings, follow the Autonics web site.

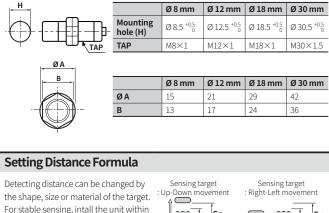


For stable sensing, intall the unit within Sa Sn tes ز معن Sa Sn the 70 % of sensing distance. Setting distance (Sa) = Sensing distance (Sn) \times 70 %

Mutual-interference & Influence by Surrounding Metals

Mutual-interference


When plural proximity sensors are mounted in a close row, malfunction of sensor may be caused due to mutual interference.

 Therefore, be sure to provide a minimum distance between the two sensors, as below table.



Influence by surrounding metals

 When sensors are mounted on metallic panel, it must be prevented sensors from being affected by any metallic object except target. Therefore, be sure to provide a minimum distance as below chart.



Sensing side Item	Ø 8 mm	Ø 12 mm	Ø 18 mm	Ø 30 mm
А	35	40	65	110
В	30	35	60	100
ł	0	0	0	0
Ød	8	12	18	30
m	4.5	8	20	40
n	30	40	60	100

Tightening Torque

Use the provided washer to tighten the nuts.

The allowable tightening torque table is for inserting the washer as below.

Washer Mounting side	Sensing side Strength	Ø8mm	Ø 12 mm	Ø 18 mm	Ø 30 mm
	Tightening torque	3.5 N m	25 N m	70 N m	180 N m

Durability Test

High resistance to the impact of removing Welding sludge attached to the sensing face

Continuous hitting test

• Test model: PRF18, hitting object: 1.3 kg of weight, hitting speed: 48 times per 1 min, The number of hitting times: 300 thousand times



Metallic brush test

• Test model: PRF18, testing object: stainless cup brush, rotation speed: 80 RPM, testing time: 3 hours

Test conditions

(unit: mm)



Electromagnetic Resistance Test

Large current from welding generates magnetic field which can affect the proximity sensor to malfunction due to noise. This product, however, can be used near strong noise without malfunctioning, thanks to excellent electromagnetic resistance. This test is conducted in the environment of welding. Minimum sensing distance can be different by welding environment.


• Test model: all Series, welding current: 13,000 A, installation direction: front and side



Recommended to use spatter protection cover (sold separately) for general type.

Minimum sensing distance between weld and sensor

Sensing side Installation direction	Ø 8 mm	Ø 12 mm	Ø 18 mm	Ø 30 mm
Front	60 mm	30 mm	10 mm	120 mm
Side	70 mm	60 mm	50 mm	120 mm

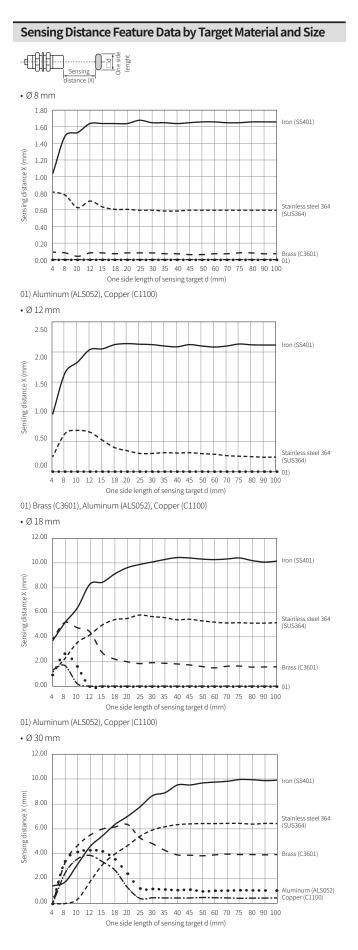


Sensing Distance Feature Data by Parallel (left/right) Movement

r titi

Sensing distance X (mm)

Sensing distance X (mm)

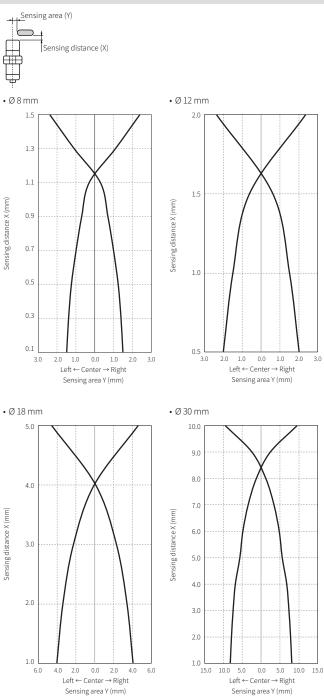

Autonics