#### JUMO GmbH & Co. KG

 
 Delivery address:
 Mackenrodtstraße 14, 36039 Fulda, Germany

 Postal address:
 36035 Fulda, Germany

 Phone:
 +49 661 6003-0

 Fax:
 +49 661 6003-607

 e-mail:
 mail@jumo.net

 Internet:
 www.jumo.net
 JUMO Instrument Co. Ltd.

JUMO House Temple Bank, Riverway Harlow, Essex CM 20 2TT, UK Phone: +44 1279 635533 Fax: +44 1279 635262 e-mail: sales@jumo.co.uk Internet: www.jumo.co.uk

#### JUMO PROCESS CONTROL INC.

 885 Fox Chase, Suite 103

 Coatesville PA 19320, USA

 Phone:
 610-380-8002

 1-800-554-JUMO

 Fax:
 610-380-8009

 e-mail:
 info@JumoUSA.com

 Internet:
 www.JumoUSA.com



Data Sheet 70.3041

Page 1/10

# JUMO dTRON 304/308/316 Compact Controller with program function

# **Brief description**

The **unio** dTRON 300 series of controllers includes four freely programmable instruments in different DIN formats for controlling temperature, pressure and other process variables. The high-contrast, multicolor LC display for process value, setpoint and operator prompting contains two four-digit 7-segment displays, two single-character 16-segment displays, display of the active setpoints, six switch position indicators, and displays for the dimensional unit, ramp function and manual operation.

Simple operation through 4 keys. The instruments can be used as 2-state, 3-state, modulating or continuous controllers. The controller software includes a program or ramp function, parameter set changeover, two autotuning (self-optimization) procedures, a math and logic module, as well as 4 limit comparators.

Linearizations for the usual transducers are stored, and a customer-specific linearization table can be programmed.


A setup program is available for user-friendly configuration from a PC.

A serial interface for RS422/485 or Profibus-DP can be used to integrate the instruments into a data network.

The electrical connection is made at the back, via screw terminals.

The possible input and output configurations are shown in the following block diagram. The option boards are universally applicable for all instruments in the series.

# **Block structure**

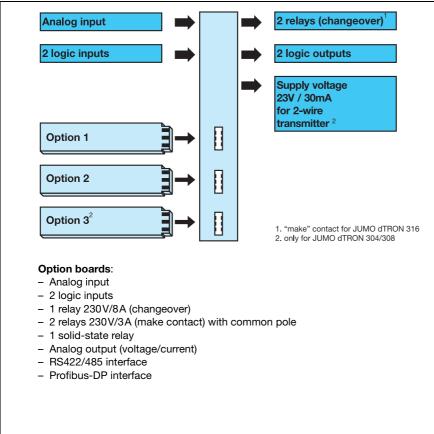



JUMD dTRON 316 Type 703041/ ...



JUMD dTRON 308H Type 703042/ ...



JUMO dTRON 308Q Туре 703043/ ...



Type 703044/ ...

## **Key features**

- Max. two programmable analog inputs
- Four programmable setpoints, two parameter sets
- Program function with 8 segments, or ramp function
- Math and logic module
- 4 limit comparators
- Two timer functions
- Two self-optimization procedures
- Fast, user-friendly configuration through the setup program with program editor
- RS422/485 interface
- Profibus-DP interface
- cUL/UL approval applied for

### Self-optimization

Standard features include the tried and tested self-optimization, which makes it possible for the controller to be matched to the control loop by a user who is not a control technology expert.

This functions by evaluating the response of the control loop to specific changes in the manipulating variable. Either an oscillatory method or a step-response test can be selected. The step-response test is used, for example, in the plastics industry or in processes where the oscillatory method cannot be employed. The controller parameters that are calculated are: proportional band, reset time, derivative time, cycle time and filter time constant.

# **Customer-specific** linearization

In addition to the linearizations for the usual transducers, a customer-specific linearization can also be created. The programming is carried out in the setup program, in the form of a table of values or a formula.

# User level

Parameters which frequently have to be changed by the user, can be combined in the instrument and displayed at the user level (only through the setup program).

# Math and logic module<sup>1</sup>

The math module makes it possible to combine values such as the setpoints, output levels and measurements from the analog inputs into a mathematical formula.

The logic module can be used, for instance, to make a logical combination of logic inputs and limit comparator states.

Up to two math or logic formulae can be entered through the setup program, and the results of the calculations can be presented at the outputs or used for internal purposes.

# Special types of controller<sup>1</sup>

The instrument can be operated as a differential, humidity or ratio controller.

# Logic functions

- Start/cancel self-optimization
- Change to manual mode
- Hold/cancel ramp
- Controller off
- Setpoint changeover
- Parameter set switching - Key/level inhibit
- Text display
- Display off
- Acknowledge limit comparators
- Program start/hold/cancel
- Timer start/stop


The logic functions can be combined with one another (only through the setup program). 1. Extra code

# Functions of the outputs

- Analog input variables
- Math
- Process value
- Setpoint
- Ramp end value
- Control deviation
- Output level
- Controller outputs
- Limit comparators
- Control contacts
- Logic inputs
- Logic formula
- Program end
- Timer signals
- Program/automatic signal

# Ramp function

Either a rising or a falling ramp function can be used (increase or decrease in the setpoint). The change in setpoint value SP at t<sub>0</sub> is the final value for the ramp. The ramp starts with the setpoint at time t<sub>0</sub>. The slope of the ramp can be programmed; the sign (direction) of the slope is given by the relationship between the setpoint at time to and the SP value. When the supply voltage is switched on, the ramp function starts with the momentary process value.



# **Displays and controls**



(1)	7-segment display (factory setting: process value)
	four-digit, red, decimal place is configurable (automatic adjustment on display overflow)
(2)	Active setpoint (factory setting: SP1)
	SP1, SP2, SP3, SP4 (SP=setpoint); green;
(3)	7-segment display (factory setting: setpoint)
	four-digit, green, decimal place is configurable,
	also used for operator prompting (display of parameter and level symbols)
(4)	Keys
(5)	Indication
	yellow, for
	- switch status of logic outputs 1 – 6
	- ramp/program function
	- active manual operation
(6)	16-segment display + dim. units
	two-digit, green, with symbols for °C, °F, h, min, %

## **Timers**

Two timers are available for time-dependent control. The status of the timers can be switched through to the logic outputs or internally processed for the activation or deactivation of time-dependent processes.

# Setup program (accessory)

The setup program for configuring the instrument is available in English, French and German. Using a PC, you can create and edit sets of data, and transfer them to the controller or read them out from the instrument. The data sets are stored and managed.

The setup program can be expanded through additional program modules.

#### **Program editor**


For the easy creation of programs. Startup

To check the control-loop behavior.

	ACCES N NEI	
Sal and a second	Datei-Info-Kopf:	1
Status and	<ul> <li>Hardware:</li> </ul>	
82	<ul> <li>Analogeingange:</li> </ul>	
Angerger Transporter	Regler:	
8 minutes	Geber:	
State Farmer	Limitkong     A	
Barbards (upt	Ausgange	
W Contractor Pa	Binarfunkt      Imme      Protein	
Tagent laster	Anzeige / me Fill	
	Timer: Mastanais Pt + In Fill	
	+ Schnittste	
	Regler-Pa	
	Sollwerte:	1
	Mathematik / Logik:	
	Number conficte Linearisian an	
longt get.		
here the Ar		
13, man ( Burnara ( )	nuna ( Nagrana /	10

#### Page 3/10

#### **Program function**

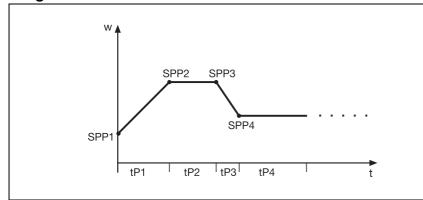

A setpoint profile can be implemented with a maximum of 8 program segments. The settings for the segment setpoints (SPP1 — SPP8) and segment times (tP1 - tP8) are carried out at the user level. The time scale can be configured as mm:ss or hh:mm (s = seconds, h = hours). A program-end signal can be generated, and the program can be halted or canceled.

Further functions can be defined through the setup program (start at process value, cyclical program handling, segment-by-segment assignment of parameter sets and four control contacts). The program profile can also be visualized.

#### Warm-up ramp for hot-channel controller

The warm-up ramp for hot-channel equipment is used, for example, for the gentle operation of ceramic heater elements. Damage can be avoided by allowing moisture to evaporate slowly from the hygroscopic heater elements during the warm-up phase.

### Interfaces

### RS422/RS485 interface

The serial interface is used for communication with higher-level (supervisory) systems. The Modbus protocol is used for

transmission.

#### **PROFIBUS-DP**

The Profibus-DP interface can be used to integrate the controller into a fieldbus system operating according to the Profibus-DP standard. This Profibus version is especially designed for communication between automation systems and decentralized peripheral devices at the field level, and optimized for speed.

Data transmission is made serially, using the RS485 standard.

GSD generator, the project-planning tool that is supplied with the package (GSD = Gerätestammdaten, i.e. device data), is used to make a selection of device characteristics for the controller to create a standardized GSD file that is used to integrate the controller into the fieldbus system.

#### **Parameter level**

All the parameters and their meanings are included in the table. Some parameters may be missing or meaningless for a particular type of controller. Two parameter sets can be stored, to handle special applications.

Parameter	Value range	Factory setting	Meaning
Proportional band	0 — 9999 digits	0 digits	Size of the proportional band 0 means that the controller structure is out of action!
Derivative time	0 to 9999 sec	80 sec	Influences the differential component of the controller output signal
Reset time	0 to 9999 sec	350 sec	Influences the integral component of the controller output signal
Cycle time	0 to 999.9 sec	20.0 sec	When using a switched output, the cycle time should be chosen so that the energy flow to the process is as continuous as is practicable without overloading the switching elements.
Contact spacing	0 to 999.9 sec	0.0 digits	The spacing between the two control contacts for 3-state or modulating controllers
Switching differential	0 — 999.9 digits	1.0 digits	Hysteresis for switching controllers with proportional band = 0
Actuator time	5 to 3000 sec	60 sec	Actuator time range used by the control valve for modulating controllers
Working point	-100 to +100%	0%	The output level for P and PD controllers (if $x = w$ then $y = Y0$ )
Output level limiting	0 — 100%	100%	The maximum limit for the output level
	-100 to +100 %	-100%	The minimum limit for the output level

### **Technical data**

### Thermocouple input

Designation		Measuring range	Measuring accuracy	Ambient temperature error
Fe-Con L		-200 to + 900°C	≤0.25%	100 ppm /°C
Fe-Con J	EN 60 584	-200 to +1200°C	≤0.25%	100 ppm /°C
Fe-Con U		-200 to + 600°C	≤0.25%	100 ppm /°C
Cu-Con T	EN 60 584	-200 to + 400°C	≤0.25%	100 ppm /°C
NiCr-Ni K	EN 60 584	-200 to +1372°C	≤0.25%	100 ppm /°C
NiCr-Con E	EN 60 584	-200 to +1000°C	≤0.25%	100 ppm /°C
NiCrSi-NiSi N	EN 60 584	-100 to +1300°C	≤0.25%	100 ppm /°C
Pt10Rh-Pt S	EN 60 584	0 to 1768°C	≤0.25%	100 ppm /°C
Pt13Rh-Pt R	EN 60 584	0 to 1768°C	≤0.25%	100 ppm /°C
Pt30Rh-Pt6Rh B	EN 60 584	0 to 1820°C	≤0.25% <sup>1</sup>	100 ppm /°C
W5Re-W26Re C		0 to 2320 °C	≤0.25%	100 ppm /°C
W3Re-W25Re D		0 to 2495 °C	≤0.25%	100 ppm /°C
W3Re-W26Re		0 to 2400 °C	≤0.25%	100 ppm /°C
Cold junction			Pt100, internal	£

1. in the range 300 to 1820°C

#### Input for resistance thermometer

Designation		Connection	Measuring range	Measuring accuracy		Ambient temperature error
				3-/4-wire	2-wire	
Pt100	EN 60 751	2-wire / 3-wire / 4-wire	-200 to +850°C	≤0.05%	≤0.4%	50 ppm / °C
Pt500	EN 60 751	2-wire / 3-wire / 4-wire	-200 to +850°C	≤0.2%	≤0.4%	100 ppm /°C
Pt1000	EN 60 751	2-wire / 3-wire / 4-wire	-200 to +850°C	≤0.1%	≤0.2%	50 ppm /°C
KTY11-6		2-wire	-50 to +150°C	≤1.0%	≤2.0%	50 ppm /°C
Sensor lead re	esistance	max. $30\Omega$ per lead for 3-wire or 4-wire circuit				
Measuring current		approx. 250µA				
Lead compensation		Not required for 3-wire or 4-wire circuit. With a 2-wire circuit, the lead resistance can be compensation software by a correction of the process value.			nce can be compensated	

### Input for standard signals

Designation	Measuring range	Measuring accuracy	Ambient temperature error
Voltage	0(2) - 10V 0 - 1V Input resistance $R_{IN} > 100k\Omega$	≤0.05% ≤0.05%	100 ppm / °C 100 ppm / °C
Current	0(4) — 20mA, voltage drop $\leq$ 1.5V	≤0.05%	100 ppm / °C
Heating current	0 — 50mA AC	≤1%	100 ppm / °C
Resistance transmitter	min. 100Ω, max. 4kΩ	≤0.5%	100 ppm / °C

#### Logic inputs

Floating contacts

Standard version

#### Measuring circuit monitoring

In the event of a fault, the outputs move to a defined (configurable) status.

Sensor	Overrange / underrange	Probe or lead short-circuit	Probe or lead break	
Thermocouple	•	-	•	
Resistance thermometer	•	•	•	
Voltage 2 - 10V 0 - 10V	•	-	• -	
Current 4 – 20mA 0 – 20mA	•	-	• -	

• = recognized - = not recognized

### Outputs

Culputs	
Relay (changeover) for type 703042/43/44 contact rating contact life	3A at 230V AC resistive load 350,000 operations at rated load / 750,000 operations at 1A
Relay (changeover) (option) contact rating contact life	8A at 230V AC resistive load 100,000 operations at rated load / 350,000 operations at 3A
Relay (make) for type 703041 contact rating contact life	3A at 230V AC resistive load 150,000 operations at rated load / 350,000 at 1A
Relay (changeover) (option) contact rating contact life	3A at 230VAC resistive load 350,000 operations at rated load / 900,000 operations at 1A
Logic output	0/12V / 30mA max. (sum of all output currents) or 0/18V / 25mA max. (sum of all output currents)
Solid-state relay (option) contact rating protection circuitry	1 A at 230V varistor
Voltage (option) output signals load resistance	$\begin{array}{c} 0 - 10 \text{V} / 2 - 10 \text{V} \\ \text{R}_{\text{load}} \geq 500 \Omega \end{array}$
Current (option) output signals load resistance	0 - 20mA / 4 - 20mA R <sub>load</sub> $\leq$ 500 $\Omega$
Supply voltage for 2-wire transmitter voltage	electrically isolated, not stabilized 30V DC with no load 23V at 30mA load

### Controller

Controller type	2-state controller,	
	3-state controller, modulating controller, continuous controller	
Controller structures	P, PD, PI, PID	
A/D converter	dynamic resolution up to 16-bit	
Sampling time	250msec	
	50msec, 90msec, 150msec, 250msec	

### **Electrical data**

Supply voltage (switchmode PSU)	110 — 240V AC -15/+10%, 48 — 63Hz	
	20-53V AC/DC, 48-63Hz	
Electrical safety	to EN 61 010, Part 1	
	overvoltage category II, pollution degree 2	
	for type 703041 with power supply AC/DC connect to SELV and PELV only	
Power consumption	max. 7VA	
Data backup	EEPROM	
Electrical connection	at the back, via screw terminals,	
	conductor cross-section up to 1.5mm <sup>2</sup>	
	with core ferrules (length: 10mm)	
Electromagnetic compatibility	EN 61 326	
Interference emission	Class B	
Interference immunity	to industrial requirements	

#### Standard version


### Housing

Housing type	plastic housing for panel mounting to DIN 43 700	
Depth behind panel	90 mm	
Ambient/storage temperature range	0 to 55°C / -40 to +70°C	
Climatic conditions	rel. humidity ≤90% annual mean, no condensation	
Operating position	horizontal	
Protection	to EN 60 529, front IP65 / back IP20	
Weight (fully fitted)	JUMO dTRON316: approx. 220g	
	JUMO dTRON308: approx. 380 g	
	JUMO dTRON304: approx. 490g	


### Interface

MODbus		
Interface type	RS422/485	
Protocol	Modbus, Modbus-integer	
Baud rate	9600, 19200, 38400	
Device address	0 — 255	
Max. number of nodes	32	
Profibus		
Device address	0 — 255	


### Connection diagram, type 703041

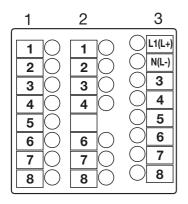


#### **Terminal strip 3**

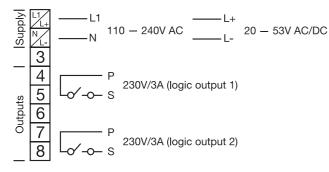


### **Terminal strip 2**

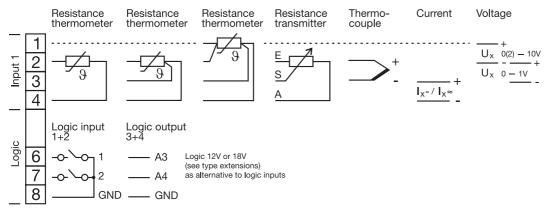


#### **Terminal strip 1**

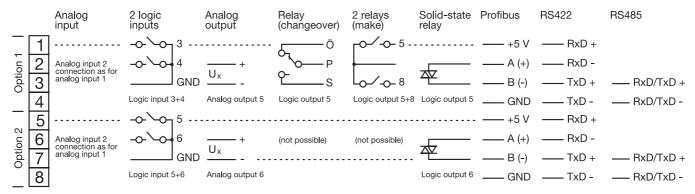

### Connection diagram, type 703042/43/44

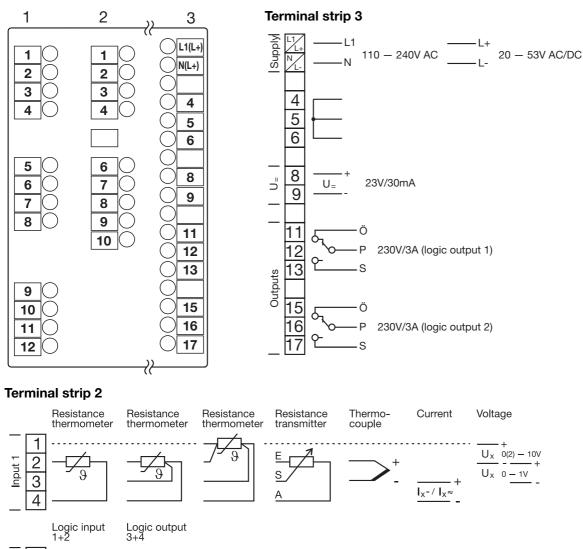




GND -




- GND


#### **Terminal strip 1**


10

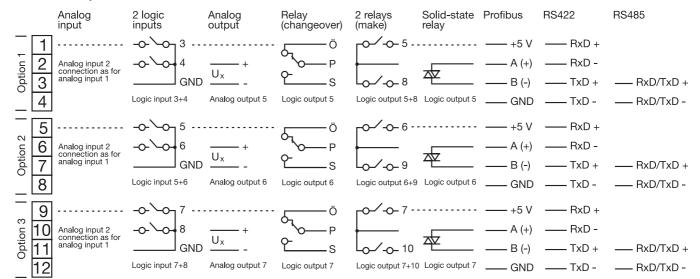


### **Dimensions**

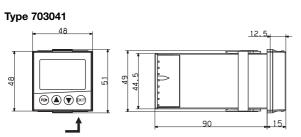




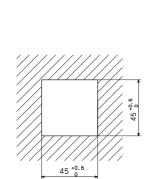


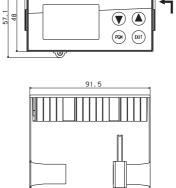


99 96


Type 703042/43




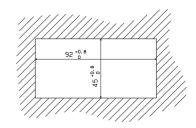


Туре 703044

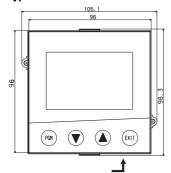

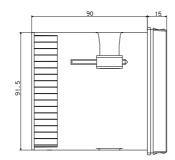

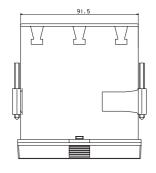


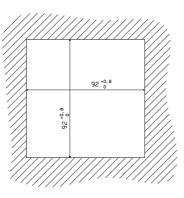

Close mounting Minimum spacing of panel cut-outs		
Туре	horizontal	vertical
without setup connector:		
703041	11mm	30mm
703042 (portrait format)	11mm	30mm
703043 (landscape fmt.)	30mm	11mm
703044	11mm	30mm
with setup connector (see arrow):		
703041	11mm	65mm
703042 (portrait format)	11mm	65 mm
703043 (landscape fmt.)	65mm	11 mm
703044	11mm	65mm

### **Order details**

	Basic type
703041	JUMO dTRON316, format 48mm x 48mm incl. 1 analog input, 2 relay outputs and 2 logic inputs or 2 logic outputs
703042	JUMO dTRON308, format 48mm x 96mm (portrait format) incl. 1 analog and 2 logic inputs, 2 relays and 2 logic outputs
703043	JUMO dTRON308, format 96mm x 96mm (landscape format) incl. 1 analog and 2 logic inputs, 2 relays and 2 logic outputs
703044	JUMO dTRON304, format 96mm x 96mm incl. 1 analog and 2 logic inputs, 2 relays and 2 logic outputs

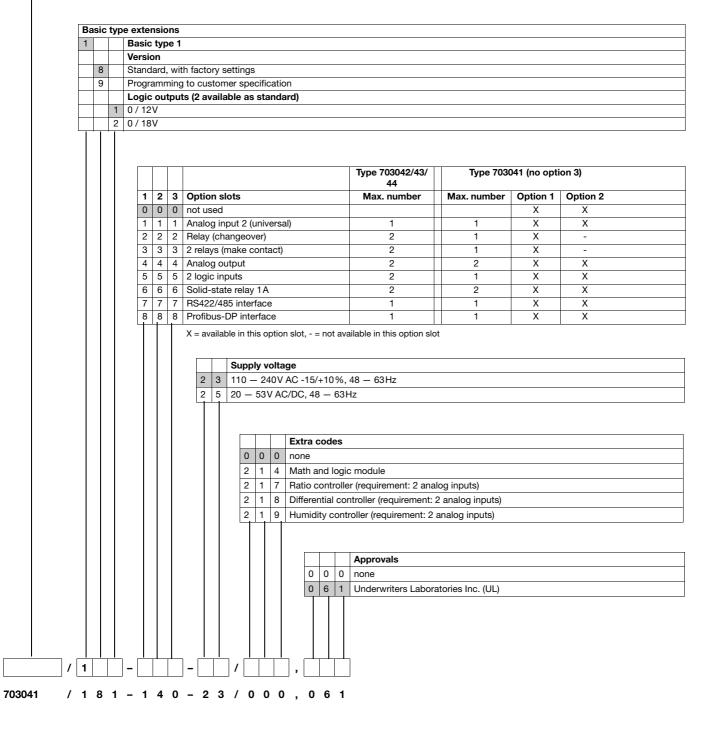

= stock versions

- 1 seal

- mounting brackets

- brief operating instructions

- 1 mini-CD including DEMO-software & operating manuals as pdf-file
- (Actual DEMO-software can be downloaded at www.JUMO.net.
  - To enable DEMO-software to full rights, contact your local JUMO subsidiary.)

Scope of delivery: - 1 controller