Autonics

INDUCTIVE PROXIMITY SENSOR DC 2WIRE TYPE



Thank you very much for selecting Autonics products. For your safety, please read the following before using.

Caution for your safety

*Please keep these instructions and review them before using this unit.

*Please observe the cautions that follow;

Marning Serious injury may result if instructions are not followed.

▲ Caution Product may be damaged, or injury may result if instructions are not followed.

*The following is an explanation of the symbols used in the operation manual. **∆**caution:Injury or danger may occur under special conditions.


∧Warning

- 1. In case of using this unit with machineries(Nuclear power control, medical equipment, vehicle, train, airplane, combustion apparatus, entertainment or safety device etc), it is required to install fail-safe device, or contact us.
- t may cause a fire, human injury or property loss 2. Do not connect power directly without load.
- It may result in damage to inner components or burn them out.

∧Caution

- 1. Do not use this unit in place where there is flammable, explosive gas, chemical or strong alkalis, acids. It may cause a fire or explosion.
- 2. Do not impact on this unit.
- t may result in malfunction or damage to the product.
- 3. Do not use this product beyond rated voltage or apply AC power to DC power. It may result in serious damage to the product

Ordering information

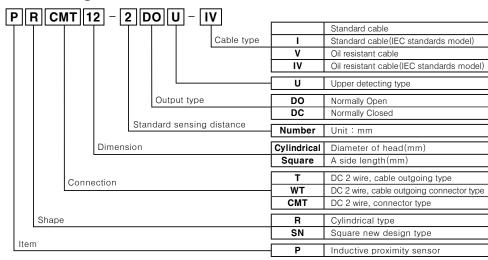

Control output diagram & Load operating

		Normally Open	Normally Closed	
Brown Load 0 +V	Sensing target	Presence Nothing	Presence Nothing	
	Load	Operation Return	Operation Return	
Blue 0 0V	Indicator (LED)	ON OFF	ON OFF	

* The above specifications are subject to change without notice.

Specifications

Model	PRT08-1.500 PRT08-1.500 PRWT08-1.500 PRWT08-1.500-V PRWT08-1.500-V PRWT08-1.500-V PRWT08-1.500-V	PRWT08-2DC-V PRWT08-2DO-N PRWT08-2DC-N	PRCMT12-2DC-I	PRT12-4DO PRT12-4DC PRWT12-4DO PRWT12-4DC -I PRWT12-4DC-I PRCWT12-4DC-I PRCWT12-4DC PRCWT12-4DC-I PRCWT12-4DC-I PRCWT12-4DC-I	PRCMT18-5DC-I	PRT18-8DO PRT18-8DC PRWT18-8DC PRWT18-8DC-I PRWT18-8DC-I PRWT18-8DC-I PRCMT18-8DC-I PRCMT18-8DC-I PRCMT18-8DC-I PRCMT18-8DC-I	PRCMT30-10DC-I	PRT30-15DO PRT30-15DC PRWT30-15DC PRWT30-15DO-I PRWT30-15DC-I PRCMT30-15DC-I PRCMT30-15DC-I PRCMT30-15DC-I PRCMT30-15DC-I			
Sensing distance	1.5mm ±10%	2mm ±10%	2mm ±10%	4mm ±10%	5mm ±10%	8mm ±10%	10mm ±10%	15mm ±10%	5mm ±10%		
Hysteresis					% of sensing						
Standard		×1 mm	12×1	25×25×1mm	30×30×1mm	45×45×1mm	18×18×1mm				
sensing target		on)		on)	(Iron)	(Iron)	(Iron)	(Iron)	(Iron)		
Setting distance	0~1.05mm	0~1	.4mm	0~2.8mm	0~3.5mm	0~5.6mm	0~7mm	0~10.5mm	0~3.5mm		
Power supply (Operating voltage)	12-24VDC (10-30VDC)										
Leakage current	Max. 0.6mA										
Response frequency	1.5KHz	1.0KHz	1.5KHz	50	0Hz	350Hz	400Hz	200Hz	700Hz		
Residual voltage	Max. 3.5V										
Affection by Temp.	Within ±10℃ max. of sensing distance at 20℃ in temperature range of -25 to 75℃(PR□T08 Series: Max. ±20%)										
Control output					2 ~ 100mA						
Insulation resistance					00MΩ(500VDC r	00 ,					
Dielectric strength					AC 50/60Hz for						
Vibration		1m	m amplitude at				ctions for 2 ho	urs			
Shock					(, Y, Z directio						
Indicator					ng indicator(R						
Ambient Temp.					C(at non-free						
Storage Temp.					C(at non-free:	0 ,					
Ambient humidity					RH(at non- d				la		
Protection circuit									Surge protection		
Protection	ļ				67(IEC Standa						
Materials	Stand	Case/Nut: Nikel plated Brass, Washer: Nikel plated Iron, Sensing surface: Heat-resistant ABS, Standard cable(Black): Polyvinyl chloride(PVC), Oil resistant cable(Gray): Oil resistant Polyvinyl chloride(PVC)									
Approval					C€						
Weight	PRT:App PRWT:Ap	rox. 68g oprox.30g	PRT:App PRWT:Ap PRCMT:A	rox. 122g oprox. 65g Approx. 49g	PRWT:Ar	rox. 181g oprox. 130g Approx. 134g	PSNT: Approx. 71g				

Dimensions


Connector type Cable outgoing type PRT(M8, M12, M18, M30) PRWT(M8, M12, M18, M30) PRCMT(M12, M18, M30) PSNT17 Flush **=**; flush Wash

			•										
	Туре		Α	В	С	D	E	F	G	Н	J	K	N
	М8	PRT	M8×1	30	30	_	4		_	3.5	13	15	2,000
IVIO	PRWT	M8×1	30	30	_	4		43.5	4	13	15	300	
		PRT	M12×1	46	31.5	14.5	4	_	<u> </u>	4	17	21	2,000
	M12	PRWT	M12×1	46	31.5	14.5	4	_	43.5	4	17	21	300
		PRCMT	M12×1	55.8	31.5	24.3	4	_		_	17	21	_
Flush		PRT	M18×1	47.5	29.5	18	4	_		5	24	29	2,000
	M18	PRWT	M18×1	47.5	29.5	18	4	_	43.5	5	24	29	300
		PRCMT	M18×1	54.3	29.5	24.8	4	_	_	_	24	29	
м30	PRT	M30×1.5	58	38	20	5	_	_	5	35	42	2,000	
	M30	PRWT	M30×1.5	58	38	20	5	_	43.5	5	35	42	300
		PRCMT	M30×1.5	63.8	38	25.8	5	_	_	_	35	42	_
140	MO	PRT	M8×1	30	26	_	4	4	_	3.5	13	15	2,000
	M8	PRWT	M8×1	30	26	_	4	4	43.5	4	13	15	300
	M12	PRT	M12×1	46	24.5	14.5	4	7	_	4	17	21	2,000
		PRWT	M12×1	46	24.5	14.5	4	7	43.5	4	17	21	300
Non-		PRCMT	M12×1	55.8	24.5	24.3	4	7	<u> </u>	_	17	21	l —
		PRT	M18×1	47	19	18	4	10	_	5	24	29	2,000
flush	M18	PRWT	M18×1	47	19	18	4	10	43.5	5	24	29	300
		PRCMT	M18×1	53.8	19	24.8	4	10		_	24	29	
		PRT	M30×1.5	58	28	20	5	10	_	5	35	42	2,000
	M30	PRWT	M30×1.5	58	38	20	5	10	43.5	5	35	42	300
		PRCMT	M30×1.5	63.8	28	25.8	5	10		_	35	42	_

- $\mbox{\ensuremath{\mathtt{\#}}}\mbox{\ensuremath{\mathtt{N}}}\mbox{\ensuremath{\mathtt{H}}}\mbox{\ensuremath{\mathtt{type}}}: \emptyset 3.5, 2 \mbox{\ensuremath{\mathtt{consumm}}}\mbox{\ensuremath{\mathtt{Consumm}}}\mbox{\ensuremath{\mathtt{N}}}\mbox{\ensuremath{\mathtt{H}}}\mbox{\ensuremath{\mathtt{H}}}\mbox{\ensuremath{\mathtt{cype}}}: \emptyset 3.5, 2 \mbox{\ensuremath{\mathtt{consumm}}}\mbox{\ensuremath{\mathtt{Consumm}}}\mbox{\ensuremath{\mathtt{N}}}\mbox{\ensuremath{\mathtt{H}}}\mbox{\ensuremath{\mathtt{H}}}\mbox{\ensuremath{\mathtt{cype}}}\mbox{\ensuremath{\mathtt{cype}}}: \emptyset 3.5, 2 \mbox{\ensuremath{\mathtt{consumm}}}\mbox{\ensuremath{\mathtt{Consumm}}}\mbox{\ensuremath{\mathtt{cype}}}\mbox{\ensuremath{\mathtt{cy$

 - φ 4. 2 cores/ φ 5. 3 cores(Conductor cross section: 0.3mm, Insulator diameter: φ 1.25)


Connections

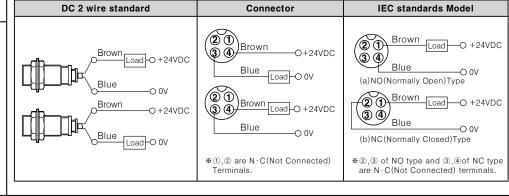

Mutual-interference & Influence by surrounding metals


○Mutual-interference

When plural proximity sensors are mounted in a close row, malfunction of sensor may be caused due to mutual interference. Therefore, be sure to provide a minimum distance between the two sensors, as below table

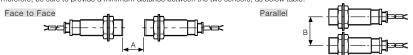

OInfluence by surrounding metals


When sensors are mounted on metallic panel, it must be prevented sensors from being affected by any metallic object except target. Therefore, be sure to provide a minimum distance as below chart.

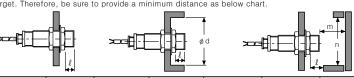

Model	PR□08-1.5D□	PR□08-2D□	PRWT□12-2D□		PRWT□18-5D□	PRWT□18-8D□		PRT 30-15D PRWT 30-15D PRCMT 30-15D
Α	9	12	12	24	30	48	60	90
В	16	24	24	36	36	54	60	90
l	0	8	0	11	0	14	0	15
ød	8	24	12	36	18	54	30	90
m	4.5	6	6	12	15	24	30	54
n	12	24	10	26	27	5.4	1.5	00

١	n	12	24	18	36	27	54	45	90
	Model	PSNT17-5D□	Face to Fa	ace				Parallel	В
ı	Α	30		\bigcap A \bigcap			m 🛊	\leftarrow	$\overline{}$
	В	36		→	—	∼ †, ,			\square
	С	5			[_]	 - ↓°		L † J	L º J
١	d	15			- -		m 1	₩₩	₩₩
١	l	24			<u>c</u> >	d _		Lil .	Lil .
	m	18						Т	Т

Setting distance

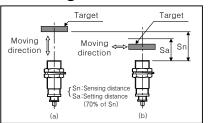

Detecting distance can be changed by the shape, size or material of the target. Therefore please check the detecting distance like (a), then pass the target within range of setting distance(Sa).

[Picture 1]

Flush

Non-flush

(Unit:mm)

- = Sensing distance(Sn) × 70% Ex)PRCMT12-2DO(See ordering infomation)
- Setting distance(Sa) = $2mm \times 0.7 = 1.4mm$

Caution for using

- . This equipment shall not be used outdoors or beyond specified temperature range.
- . Do not load over than tensile strength of cord. (\phi 4 : 30N max., \phi 5 : 50N max.) 3. Do not use the same conduit with cord of this unit and electric power
- line or power line. Also avoid the same connection.
- 4. Do not put overload to tighten nut, please use washer for tightening.
- Note1)Allowable tightening torque of a nut may be different by the distance from the head. For allowable tightening torque and the range of front and rear parts, refer to [Table 1] and above [Picture 1] respectively. The rear part includes a nut on the head side(see above [Picture 1]). Please apply a tightening torque of the front part when the nut on the front is located in the front part.

Note2)The allowable tightening torque denotes a torque value when using a prowasher as above [Picture 2]

Note3)PSNT17 Series: Tighten strength of installing bolts should be under 15kgf·cm(1.47N·m).

- . Please check the voltage changes of power source in order not to excess rating power input
- Do not use this unit during transient time (80ms) after apply power. 7. Do not connect capacity load to output part directly.
- 8. It may result in damage to the product, if use automatic transforr
- So please use insulated transformer
- 9. Please make wire short as much as possible in order to avoid noise
- 10. Be sure to cable as indicated specification on this product. If use wrong cable or bended cable, it shall not maintain the water-proof 11 It is possible to extend cable with over 0.3mm and max 200m.
- 12. If the target is plated, the operating distance can be changed by the plating material
- 13. It may result in malfunction by metal particle on product
- 14. If there are machines (motor, welding etc), which occurs big surge around this unit, please install the Varistor or absorber to source of surge, even though there is built-in surge absorber in this unit. 15. If connect the load with big inrush current (DC type bulb) to this unit, the big inrush current will flow due to the initial resistance is low. If the current flows
- the resistance of load will be bigger, then it will return to standard current. In this case, proximity sensor might be damaged by inrush current. If you use DC type bulb, please connect extra relay or resistance in order to protect proximity sensor from.
- 16. In case of the load current is small: Make the residual current is less than return current to connect the bleeder resistor to load in parallel

■ Timers

■ Display units

Panel meters

■ Pressure sensors


Rotary encoders

■ Power controllers

Vs:Power supply. Io:Min.operating current to Resistance W of Bleeder resistor

Tachometer/Pulse(Rate) meters

Switching power supplies

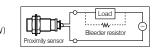

[Picture 2]

(3.92N·m)

500kaf · cm

Rear

Torque

90kgf · cn (8.82N · m

800kaf · c

17. If make a transceiver close to proximity sensor or wire connection, it may cause malfunction

* It may cause malfunction if above instructions are not followed.

Major products

- Proximity sensors
- Area sensors
- Photoelectric sensors
- ber optic sensors
- Door/Door side sensors Sensor controllers
- Graphic/Logic panels
- Temperature controllers
- Temperature/Humidity transducers
- Stepping motors/drivers/motion controlle
- Laser marking system(CO₂, Nd:YAG) Laser welding/soldering system
- Field network devices

Satisfiable Partner For Factory Autom

■HEAD QUARTERS

J, Bucheon-si, Gyeonggi-do, 420-734, 32-610-2730 / FAX: 82-32-329-0728

The proposal of a product improvement

and development :product@autonics.com

EP-KE-07-0430C